


SINGING SANTA WITH MOTION SENSOR


Please follow the instructions below in order to properly assemble and store your Singing Santa.

ASSEMBLY INSTRUCTIONS:


- No tools required.
Retain carton for storage.
1. Carefully remove all parts from the carton, your Singing Santa should include the following (Fig 1):
- 1 Completely assembled Singing Santa Face
 - 1 Upper yard stake
 - 1 Lower yard stake
 - 1 Suction cup with hook attached

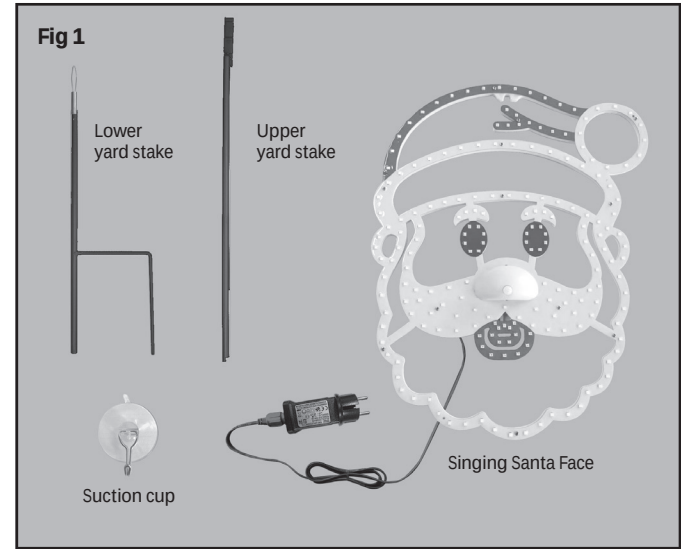

2. A yard stake is provided for ground application (Fig 5).
Connect the lower yard stake into the upper yard stake (Fig 2a and 2b).

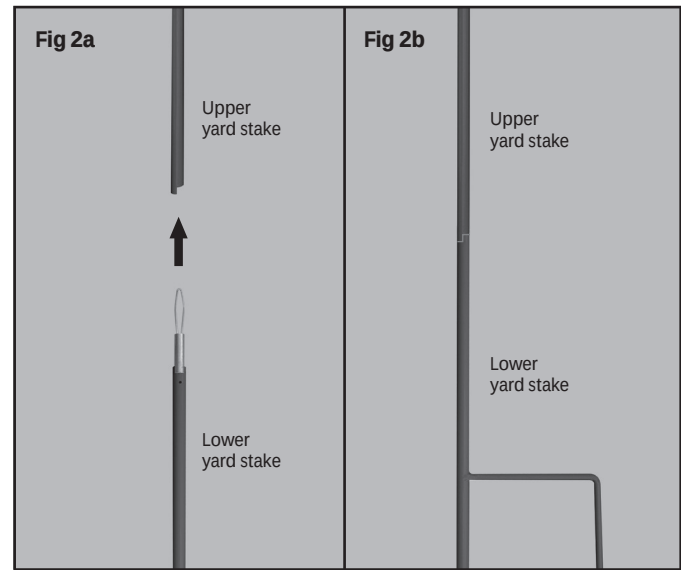


Insert the end of the upper yard stake into the designated slot area, located on the back, near the speaker & control box area (Fig 3).


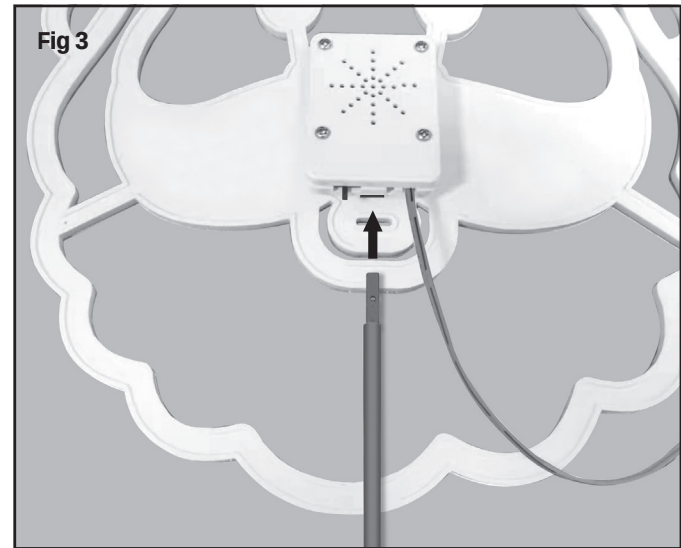


AU26

3. A suction cup is provided for window application (Fig 4 and 6).

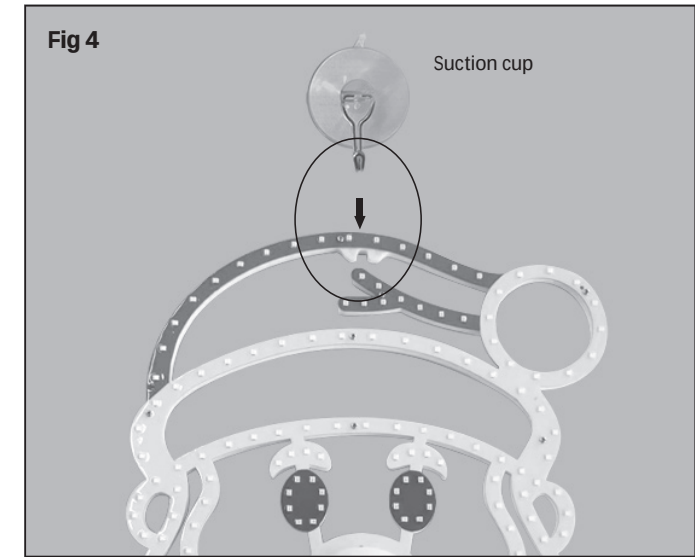


4. Place the Singing Santa in your desired location as shown in (Fig 5 and 6).

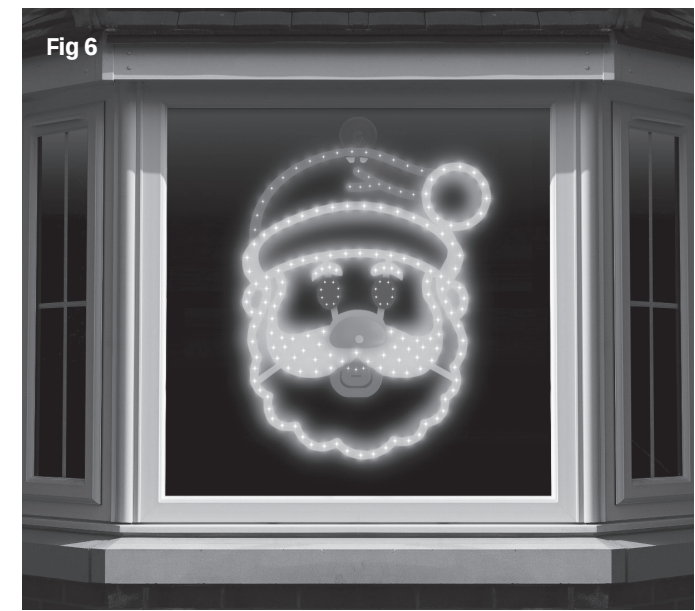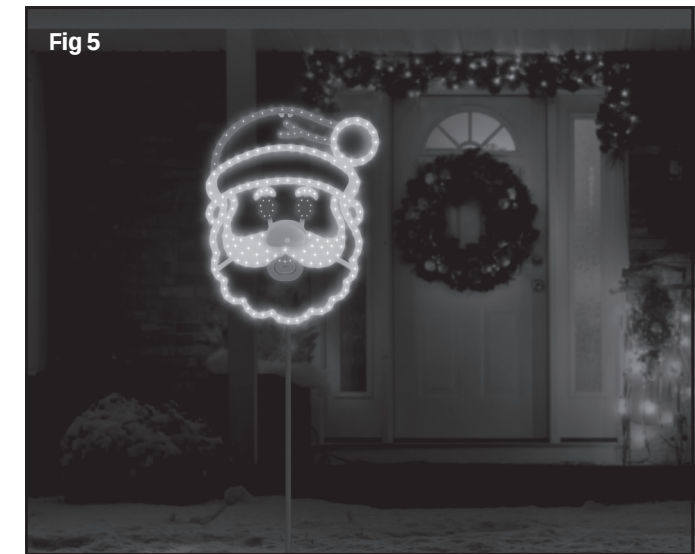

5. To illuminate, fully insert the plug into a working GFCI outlet or an outdoor rated extension cord.
Your Singing Santa is now ready to either hang on any flat surface, or to be free-standing by the use of the yard stake provided.

6. Note: To operate the speaking/singing motion sensor feature; refer to the speaker switch box located on the back of the Singing Santa (Fig 7).
- Switch to left:** Steady-on; With constant movement of the eyes & mouth only. (No speaking & singing).
- Switch to middle:** Constant movement of the eyes & mouth; speaking & singing will occur once the motion sensor has been activated.
- Switch to right:** Constant movement of the eyes & mouth; along with constant speaking & singing.

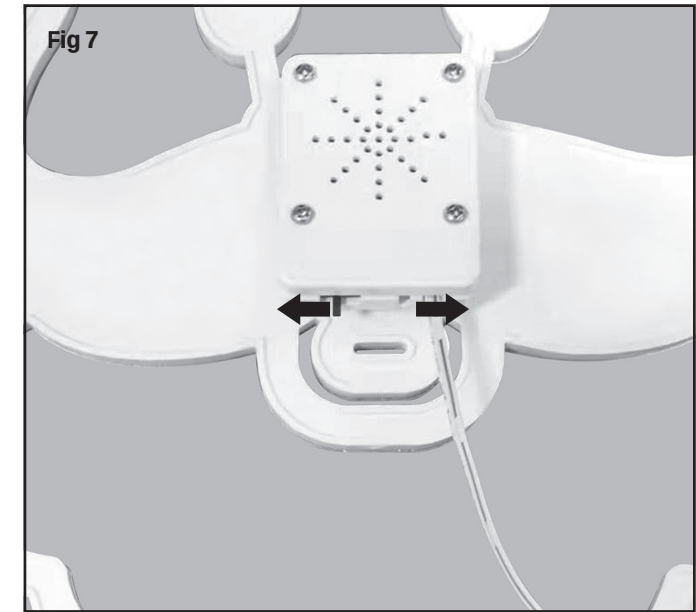

TROUBLESHOOTING

1. Failure to light; unplug the product and check to see that the GFCI outlet is functioning.

STORAGE INSTRUCTIONS

1. Store in the original carton.
2. Store in cool, dry location away from sunlight.

Made in China
Printed in China
This is not a toy, for decorative use only.


SYNGENDE JULEMAND MED BEVÆGELSESENSOR

Følg nedenstående instruktioner for korrekt montering og opbevaring af den syngende julemand.


MONTERINGSVEJLEDNING:

Ingen værktøjer påkrævet.
Gem emballagen til opbevaringsbrug.


1. Tag forsigtigt alle dele ud af emballagen.
Pakken skal indeholde følgende (Fig. 1):
1 komplet samlet Syngende Julemand
1 øvre jordspyd
1 nedre jordspyd
1 sugekop med påsat krog

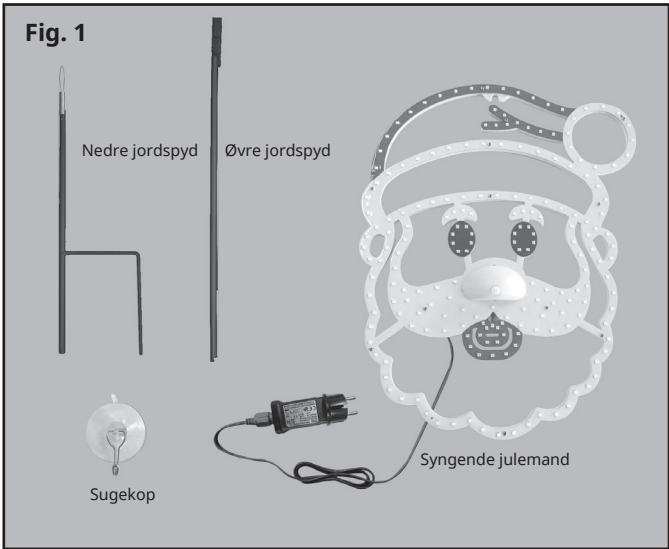

2. Der medfølger et jordspyd til montering i jorden (Fig. 5).
Saml det nedre og øvre jordspyd (Fig. 2a og 2b).

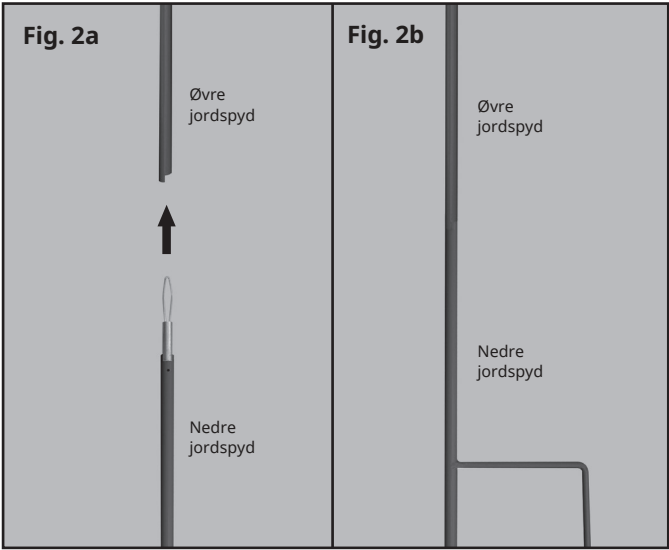


Sæt enden af det øvre jordspyd ind i det dertil beregnede hul på bagsiden nær højttaler- og kontrolboksen (Fig. 3).


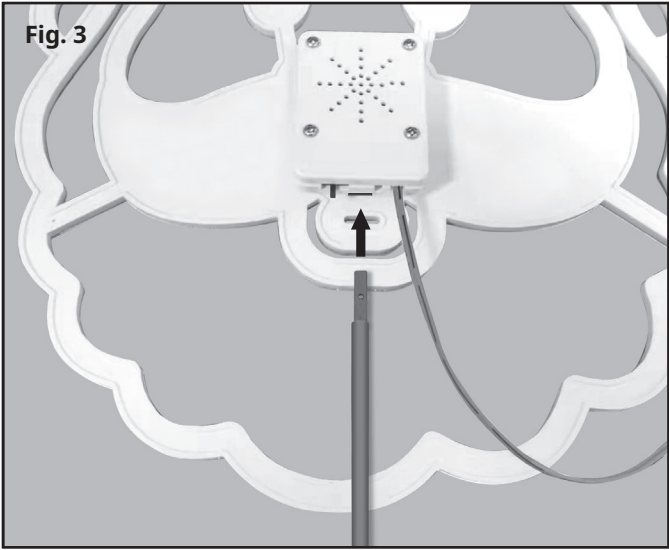


AU26

3. Der medfølger en sugekop til montering på vindue (Fig. 4 og 6).

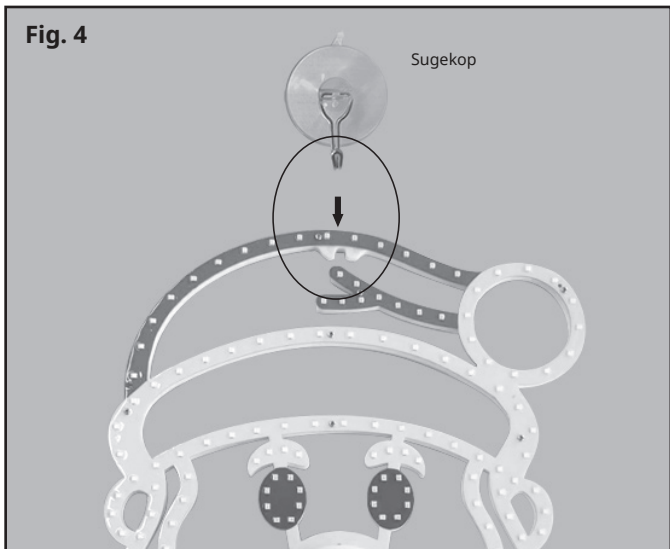


4. Placér den syngende julemand på det ønskede sted som vist i (Fig. 5 og 6).

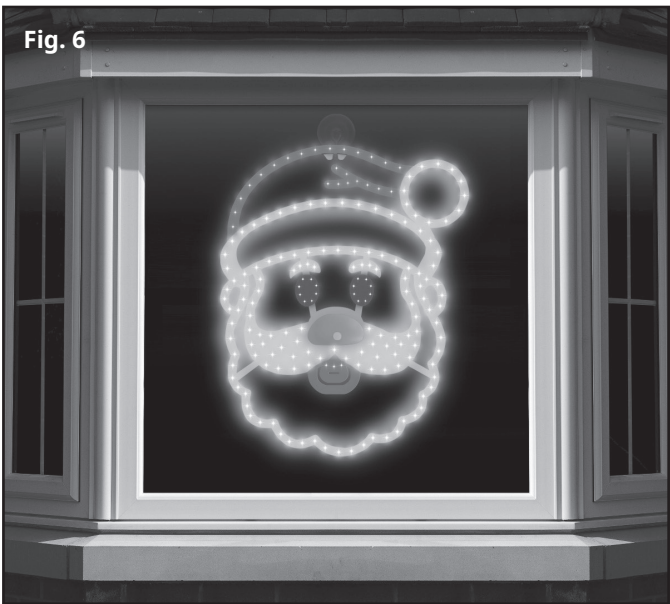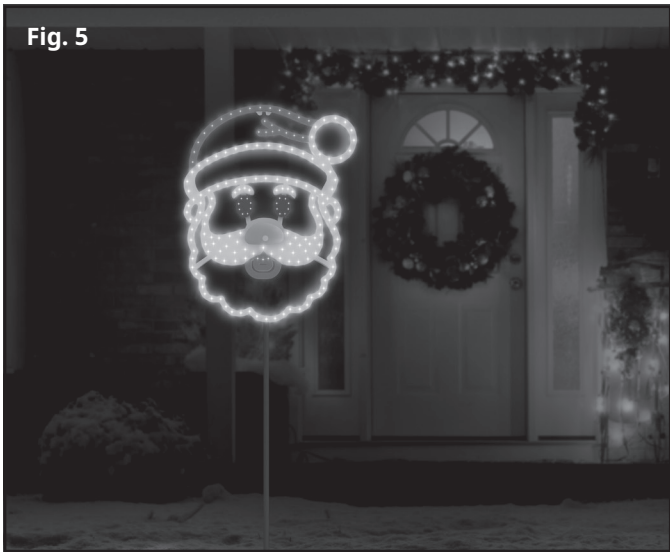

5. For at tænde skal stikket sættes helt i en fungerende GFCI-stikkontakt eller en udendørs godkendt forlængerledning.
Den syngende julemand er nu klar til at blive ophængt på en plan overflade eller placeret frit ved hjælp af det medfølgende jordspyd.

6. Bemærk: For at betjene tale-/sangfunktionen med bevægelsessen sor henvises tilhøjttaler- og kontrolboksen på bagsiden af den syngende julemand (Fig. 7).
Venstre position: Konstant lys; konstant bevægelse af øjne og mund alene. (Ingen tale eller sang).
Midterste position: Konstant bevægelse af øjne og mund; tale og sang aktiveres, når bevægelsessensoren registrerer bevægelse.
Højre position: Konstant bevægelse af øjne og mund samt konstant tale og sang.

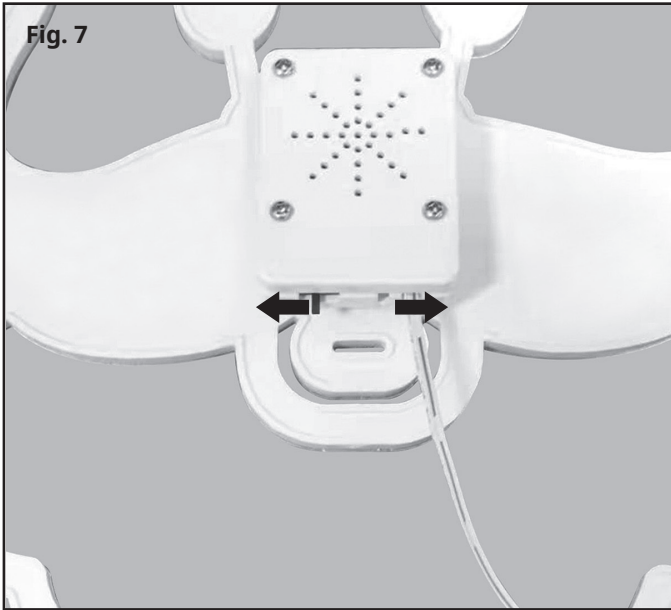

FEJLFINDING

1. Hvis produktet ikke lyser, skal du tage stikket ud og kontrollere, at GFCI-stikkontakten fungerer.

OPBEVARING

1. Opbevar produktet i den originale emballage.
2. Opbevar det på et køligt og tørt sted, beskyttet mod sollys.

Fremstillet i Kina
Trykt i Kina
Dette er ikke et legetøj – kun til dekorativ brug.