34cm

29.7cm

PRE-LIT CHRISTMAS TREE

Thank you for your purchase of this pre-lit Christmas tree.

With proper use and care, this tree will provide years of trouble-free enjoyment.

Please follow the instructions below in order to properly assemble and store your tree.

ASSEMBLY INSTRUCTIONS

(We recommend wearing proper clothing in order to prevent scratches that may occur during the assembly process.)

Carefully unpack the contents from the tree's carton (Fig 1).

Your tree will include the following components:

- A folding metal tree stand with (1) eyebolt.
- A 10 function push button foot pedal with cord and plug; which is pre-attached to your tree (Fig 5).
- 4 tree sections - labeled "A", "B", "C"and "D", as shown in Fig 5.
- Contained in the poly-bag adhered to the interior flap of the carton is the remote control which operates your tree's 10 function lighting capability. (2 x AAA batteries are included)
- Optional - Tree top support rod.

Fig 1

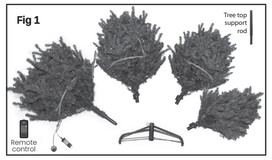

ASSEMBLY OF THE TREE STAND

1. Remove the tree stand from the plastic bag, loosen the eye bolt and open the tree stand to form an "X".
2. Align the hole for the insertion of the eyebolt.
3. Insert the eyebolt and begin threading in a clockwise direction for a couple of rotations only; leaving enough room for the tree's pole from section "A" to be inserted into the assembled stand (Fig 2).
4. Place the tree stand in its desired location; as once the tree is fully assembled, it may become too difficult to move and relocate.

Fig 2

ASSEMBLY OF THE TREE

1. Locate the bottom section of the tree which is identified by a label on the outer branches marked "A" (Fig 5).
2. Remove the protective plastic cap from the end of the pole, (that is pinched to a point), and place that end into the tree stand.
3. Now tighten the eyebolt on the tree stand; being careful not to over-tighten (Fig 3).

Fig 3

4. Remove the strapping bounding the branches upright (Fig 7). **Caution:** Do not cut.
5. Gently guide the branches of section "A" downward into place.
6. Beneath the canopy of section "A", contain's a push button foot pedal with cord and plug (Fig 5).

   Remove the twist-tie binding the cord together and insert the plug into a working electrical outlet. Section "A" will now be lit. If section "A" fails to light - press the push button foot pedal (Fig 5) - as it may be in the "Off" position.

AU26

Push button foot pedal operation:

The push button foot pedal is provided for the tree's On/Off operation; as well as for operating the tree's 10 available lighting functions.

Simply push the foot pedal's button to select your favorite color and or lighting function.

POWER POLE TECHNOLOGY

NOTE: Your tree has been designed with Power Pole technology; allowing for each of the tree's remaining sections to light up automatically, upon a firm insertion of each lettered section (Fig 5).

7. Locate the next section of the tree which is identified by a label on the outer branches marked "B" (Fig 5).
8. Remove the protective plastic cap from the end of the pole on section "B"; insert that end onto the top of the pole of section "A" (Fig 4).

Fig 4

9. Once section "B" is fully inserted downward into section "A"; both section "A" and section "B" will now be lit.
10. Again, remove the strapping bounding the branches upright (Fig 7). **Caution:** Do not cut.
11. Gently guide the branches of section "B" downward into place.
12. Locate the next section of the tree which is identified by a label on the outer branches marked "C" (Fig 5).
13. Remove the protective plastic cap from the end of the pole on section "C" insert that end onto the top of the pole of section "B" (Fig 4).
14. Once section "C" is fully inserted downward into section "B". Section "A", "B" and "C" will be lit.
15. Again, remove the strapping bounding the branches upright (Fig 7). **Caution:** Do not cut.
16. Gently guide the branches of section "C" downward into place.
17. Locate the top section of the tree which is identified by a label on the outer branches marked "D" (Fig 5).
18. Insert the top section "D" onto the top of section "C" (Fig 5).
19. Once Section "D" is fully inserted downward into section "C" your entire tree will now be lit.
20. Gently guide the branches of section "D" downward into place.

    Assembly is now completed. Proceed to spread & fluff the branch tips, to further enhance the tree's appearance, as needed.
21. Optional: A "Tree top support rod" has been provided to aid in the support of a lit or non-lit tree top. Note; A downward insertion of this support rod into a metal sleeve, atop section, is required (Fig 5).

Fig 5

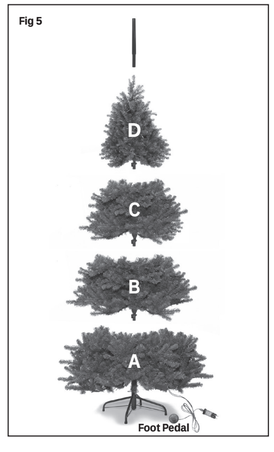

Fig 6

REMOTE CONTROL OPERATION

Your Pre-Lit LED Christmas Tree's 10 functions are controlled by the use of the remote control provided (Fig 6), by the push button foot pedal, or by your smartphone or tablet - by downloading the App!

SELECTING COLOR & FUNCTION

Simply press a desired lighting function button - Per the 10 individual lighting functions available.

1. Demo
2. Steady Warm White
3. Steady Multi
4. Twinkle Warm White
5. Slow Fade Warm White
6. Slow Fade Multi
7. Slow Color Variable
8. Fast Flip Warm White to Multi
9. Slow Flip Warm White to Multi
10. Slow Fade Warm White to Multi

TIMER FEATURE:

- Press the "Timer" button; the trees lights will flash **WARM WHITE** 3 times – Indicating that the 6 hour "On" / 18 hour "Off" timer has now been activated.
- **Note:** The tree's lights will automatically resume back to the "On" position – 24 hours from when it was initially activated.
- Press the "Timer" button again, the trees lights will flash **MULTI** 3 times – Indicating that the timer feature has now been deactivated.
- **Note:** The trees On/Off operation is now controlled by either the manual operation of the remote control, foot-pedal control or by the App!

DIMMER FEATURE:

- The Dimmer button enables for the selection of your preferred level of brightness - low, medium or high.

Fig 7

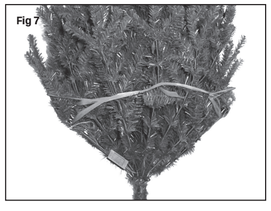

TROUBLESHOOTING

1. If the tree does not illuminate press the on/off button on your remote control. If failure to light persists, the battery may need to be replaced. Insert 2 x AAA batteries.

   NOTE: The tree's 10 function lighting capability is controlled by the use of the remote control provided, by phone or tablet - by downloading the APP.

   NOTE: By reducing the distance from your tree; you may achieve better remote control and App reception.

   If the tree fails to light due to a damaged or defective remote control; please resort to foot pedal or APP operation until a new remote control can be provided through our customer service center.
2. If failure to light persists, press the push button foot pedal; as it may be in the "Off" mode.
3. If the top of the tree or another individual lettered section does not illuminate, remove each section and then reinsert as instructed, to ensure the electrical connection is made.
4. If a light set, section or area fails to light. Simply check the coaxial connections - near the power pole area (Fig 8).
5. Always ensure that the electric outlet to be used; is functioning & working as it is intended.

   NOTE: A SPECIALTY NON-REPLACEABLE LED HAS BEEN APPLIED TO YOUR PRE-LIT TREE; IN THE CASE THAT A INDIVIDUAL LED BULB BURNS OUT, THE REMAINING LED BULBS WILL CONTINUE TO SHINE.

Fig 8

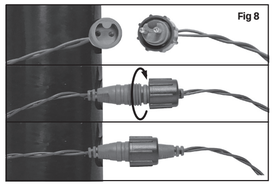

DISASSEMBLY & STORAGE

1. Gently remove the plug from its electrical outlet, and carefully bind the cord which contains the on/off push button foot pedal and plug.
2. Beginning with the tree's top section; lift each section straight up from the section below, and continue working downward.

   NOTE: You may have to slightly wiggle each section as you lift each section upward.
3. To remove the bottom and final section; loosen the eyebolt by turning in a counter-clockwise direction and lift section "A" from the support collar of the tree stand.
4. Gently fold the branches of each section upward, towards the center, and position in the storage container.

   NOTE: With the exception of the tree's "top" section; by holding each section upside down; the branches will collapse downward, due to the hinging, aiding in the packing of each section into the storage container.
5. Unthread the eyebolt from the tree's stand and fold together; placing in the storage container.
6. Replace the plastic protective caps on the pole's ends before placing in carton.
7. It is recommended to always store the tree in a cool, dry location protected from excessive exposure to heat or sunlight.

   NOTE: Store your remote control in a SAFE & DRY location and remove the batteries from remote control before storage.

   NOTE: ALTHOUGH THE LED LIGHT STRINGS ON THE TREE ARE RATED FOR INDOOR OR OUTDOOR USE; THE COMBINATION OF THE TREE WITH THE LED LIGHTS IS FOR INDOOR USE ONLY.

DOWNLOAD THE "LEDUP" APP!

1st: Scan the QR code to download the "Ledup" app onto your smartphone or tablet.

2nd: Now that the App is installed; scan the QR code again or input the Product ID: **nctr010f** to link the App to your tree - It is that easy!

NOTE: You need to enable *Bluetooth on your smartphone or tablet to use the Ledup App.

You can now control your tree's 10 functions either by the remote, smartphone or tablet.

Google Play

Apple Store

Scan the QR code to download the remote App!

Phone screen

* Bluetooth protocol is not being used to communicate with the tree. A 2.4 GHz frequency transmitter/receiver is being used to communicate with the tree.

Made in China
Printed in China
This is not a toy, for decorative use only.

34cm

29.7cm

FOROPLYST JULETRÆ

Tak for dit køb af dette foroplyste juletræ.

Med korrekt brug og pleje vil dette træ give mange års problemfri glæde.

Følg venligst instruktionerne nedenfor for at samle og opbevare dit træ korrekt.

SAMLEVEJLEDNING

(Vi anbefaler at bære passende tøj for at forhindre ridser, der kan opstå under monteringsprocessen.)

Pak forsigtigt indholdet ud af træets karton (Fig. 1).

Dit træ vil indeholde følgende komponenter:

- En foldbar træfod i metal med (1) øjebolt.
- En fodpedal med 10 funktioner, trykknap, ledning og stik; som er forudmonteret til dit træ (Fig. 5).
- 4 træsektioner - mærket "A", "B", "C" og "D", som vist i figur 5.
- I polyposen, der er fastgjort til den indvendige flap af kartonen, finder du fjernbetjeningen, der betjener dit træs lysfunktion med 10 funktioner. (2 x AAA-batterier medfølger)
- Valgfrit - Støttestang til træstoppene.

Fig 1

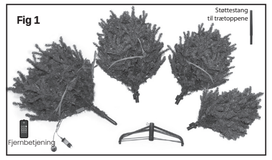

SAMLING AF TRÆSTANDEN

1. Tag træfoden ud af plastikposen, løsn øjebolten, og åbn træfoden, så den danner et "X".
2. Juster hullet til indsættelse af øjebolten.
3. Sæt øjebolten i, og begynd at skrue den med uret i et par omdrejninger; der skal være plads nok til, at træets stang fra sektion "A" kan indsættes i det samlede stativ (Fig. 2).
4. Placer træfoden på den ønskede plads; når træet er helt samlet, kan det blive for svært at flytte og omplacere.

Fig 2

TRÆETS SAMLING

1. Find den nederste del af træet, som er identificeret med en etiket på de ydre grene markeret med "A" (Fig. 5).
2. Fjern den beskyttende plastikhætte fra enden af stangen (som er klemt til en spids), og placer den ende i træstativet.
3. Spænd nu øjebolten på træstativet; pas på ikke at overspænde (fig. 3).

Fig 3

4. Fjern remmen, der afgrænser grenene oprejst (Fig. 7). **Forsigtig:** Må ikke skæres.
5. Før forsigtigt grenene i sektion "A" nedad på plads.
6. Under baldakinen i sektion "A" er der en fodpedal med trykknap, ledning og stik (Fig. 5).

   Fjern snoren, der binder ledningen sammen, og sæt stikket i en fungerende stikkontakt. Sektion "A" vil nu lyse. Hvis sektion "A" ikke lyser, skal du trykke på fodpedalen (Fig. 5) – da den muligvis er i "Slukket"-position.

AU26

Betjening af fodpedal med trykknap:

Fodpedalen med trykknap bruges til at tænde/slukke træet samt til at betjene træets 10 tilgængelige lysfunktioner.

Tryk blot på fodpedalens knap for at vælge din yndlingsfarve og/eller belysningsfunktion.

POWER POLE-TEKNOLOGI

NBEMÆRK: Dit træ er designet med Power Pole-teknologi, der gør det muligt at lyse op automatisk, når hver bogstavsektion sættes fast (Fig. 5).

7. Find den næste del af træet, som er identificeret med en etiket på de ydre grene markeret med "B" (Fig. 5).
8. Fjern den beskyttende plastikhætte fra enden af stangen på sektion "B"; sæt den ende fast på toppen af stangen på sektion "A" (Fig. 4).

Fig 4

9. Når sektion "B" er sat helt nedad i sektion "A", vil både sektion "A" og sektion "B" nu lyse.
10. Fjern igen remmen, der omslutter de oprejste grene (Fig. 7). **Forsigtig:** Skær ikke.
11. Før forsigtigt grenene fra sektion "B" nedad på plads.
12. Find den næste sektion af træet, som er identificeret med en etiket på de ydre grene markeret "C" (Fig. 5).
13. Fjern den beskyttende plastikhætte fra enden af stangen på sektion "C", og sæt den ende oven på stangen på sektion "B" (Fig. 4).
14. Når sektion "C" er sat helt nedad i sektion "B", vil sektion "A", "B" og "C" lyse.
15. Fjern igen remmen, der omslutter de oprejste grene (Fig. 7). **Forsigtig:** Skær ikke.
16. Før forsigtigt grenene fra sektion "C" nedad på plads.
17. Find den øverste del af træet, som er identificeret med en etiket på de ydre grene markeret "D" (Fig. 5).
18. Sæt den øverste del "D" oven på sektion "C" (Fig. 5).
19. Når sektion "D" er sat helt nedad i sektion "C", vil hele dit træ nu være oplyst.
20. Før forsigtigt grenene på sektion "D" nedad på plads.

    Samlingen er nu færdig. Fortsæt med at sprede og løsne grenspidserne for yderligere at forbedre træets udseende efter behov.
21. Valgfrit: En "støttestang til træstoppen" er medfølgende for at understøtte en oplyst eller ikke-oplyst træstop. Bemærk: Det er nødvendigt at indsætte denne støttestang nedad i en metalhylster oven på sektionen (Fig. 5).

Fig 5

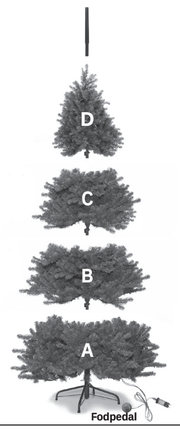

Fig 6

FJERNBETJENING

Dit præ-oplyste LED-juletræs 10 funktioner styres ved hjælp af den medfølgende fjernbetjening (Fig. 6), ved hjælp af fodpedalen eller ved at downloade appen på din smartphone eller tablet!

VALG AF FARVE OG FUNKTION

Tryk blot på en ønsket lysfunktionsknap - ud fra de 10 individuelle lysfunktioner, der er tilgængelige.

1. Demo
2. Konstant varm hvid
3. Konstant flerfarvet
4. Glimtende varm hvid
5. Langsom fading varm hvid
6. Langsom fade flerfarvet
7. Langsom farvevariabel
8. Hurtig skift af varm hvid til flerfarvet
9. Langsom skift af varm hvid til flerfarvet
10. Langsom fade fra varm hvid til flerfarvet

TIMERFUNKTION:

- Tryk på "Timer"-knappen; træernes lys vil blinke **VARM HVID** 3 gange – Angiver, at 6-timers Tændt" / 18-timers "Sluk"-timeren nu er aktiveret.
- **Bemærk:** Træets lys vil automatisk vende tilbage til "Tændt"-positionen – 24 timer efter, at det oprindeligt blev aktiveret.
- Tryk på "Timer"-knappen igen, træernes lys vil blinke **MULTI** 3 gange – Angiver, at timerfunktionen nu er deaktiveret.
- **Bemærk:** Træernes tænd/sluk-funktion styres nu enten manuelt med fjernbetjeningen, fodpedalen eller via appen!

DIMMER-FUNKTION:

- Med lysdæmperknappen kan du vælge det ønskede lysstyrkeniveau - lav, medium eller høj.

Fig 7

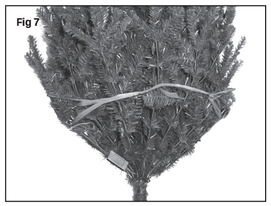

FEJLFINDING

1. Hvis træet ikke lyser, skal du trykke på tænd/sluk-knappen på din fjernbetjening. Hvis det ikke lyser, skal batteriet muligvis udskiftes. Isæt 2 x AAA-batterier.

   BEMÆRK: Træets 10-funktions belysningsfunktion styres ved hjælp af den medfølgende fjernbetjening, via telefon eller tablet - ved at downloade appen.

   BEMÆRK: Ved at reducere afstanden til dit træ kan du muligvis opnå bedre fjernbetjening og app-modtagelse.

   Hvis træet ikke lyser på grund af en beskadiget eller defekt fjernbetjening, bedes du bruge fodpedalen eller appen, indtil en ny fjernbetjening kan leveres via vores kundeservicecenter.
2. Hvis lyset ikke lyser, skal du trykke på fodpedalen; da den kan være i "Slukket"-tilstand.
3. Hvis toppen af træet eller en anden individuel sektion med bogstaver ikke lyser, skal du fjerne hver sektion og derefter sætte den i igen som anvist for at sikre, at den elektriske forbindelse er oprettet.
4. Hvis en lampe, en sektion eller et område ikke lyser, skal du blot kontrollere koaksialforbindelserne - i nærheden af mastområdet (Fig. 8).
5. Sørg altid for, at den stikkontakt, der skal bruges, fungerer som den er tiltænkt.

   BEMÆRK: DER ER MONTERET EN SPECIEL, IKKE-UDSKIFTBAR LED-PÆRE PÅ DIT FOROPLYSTE TRÆ. HVIS EN ENKELT LED-PÆRE BRÆNDER SAMMEN, VIL DE RESTERENDE LED-PÆRER FORTSÆTTE MED AT LYSE.

Fig 8

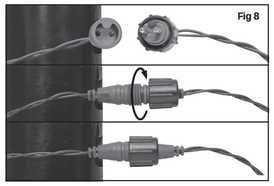

DEMONTERING OG OPBEVARING

1. Tag forsigtigt stikket ud af stikkontakten, og bind forsigtigt ledningen, der indeholder tænd/sluk-fodpedalen og stikket, sammen.
2. Start med træets øverste del; løft hver sektion lige op fra sektionen nedenunder, og fortsæt med at arbejde nedad.

   BEMÆRK: Du skal muligvis vrikke let med hver sektion, når du løfter den opad.
3. For at fjerne den nederste og den sidste sektion skal du løsne øjebolten ved at dreje den mod uret og løfte sektion "A" fra støttekraven på træstammen.
4. Fold forsigtigt grenene på hver sektion opad, mod midten, og placer dem i opbevaringsbeholderen.

   BEMÆRK: Med undtagelse af træets "øverste" sektion vil grenene, ved at holde hver sektion på hovedet, falde nedad på grund af hængslet, hvilket hjælper med at pakke hver sektion ned i opbevaringsbeholderen.
5. Skru øjebolten af træets fod, og fold den sammen. Placer den i opbevaringsbeholderen.
6. Sæt plastikbeskyttelseshætterne på stangens ender, før den placeres i kartonen.
7. Det anbefales altid at opbevare træet et køligt og tørt sted, beskyttet mod overdreven varme eller sollys.

   BEMÆRK: Opbevar din fjernbetjening et SIKKERT OG TØRT sted, og fjern batterierne fra fjernbetjeningen før opbevaring.

   BEMÆRK: SELVOM LED-LYSSTRINGENE PÅ TRÆET ER BEDØMT TIL INDENDØRS ELLER UDENDØRS BRUG, ER KOMBINATIONEN AF TRÆET MED LED-LYSEN KUN TIL INDENDØRS BRUG.

DOWNLOAD "LEDUP"-APPEN!

1. Scan QR-koden for at downloade "Ledup"-appen til din smartphone eller tablet.
2. Nu hvor appen er installeret, skal du scanne QR-koden igen eller indtaste Produkt-ID'et: **nctr010f** for at linke appen til dit træ - så nemt er det!

   BEMÆRK: Du skal aktivere *Bluetooth på din smartphone eller tablet for at bruge Ledup-appen.

   Du kan nu styre dit træs 10 funktioner enten med fjernbetjeningen, smartphonen eller tabletten.

Google Play

Apple Store

Scan QR-koden for at downloade fjernbetjeningsappen!

Telefonskærm

* Bluetooth-protokollen bruges ikke til at kommunikere med træet. En 2,4 GHz-frekvenssender/modtager bruges til at kommunikere med træet.

Fremstillet i Kina
Trykt i Kina
Dette er ikke et legetøj – kun til dekorativ brug.