34cm

29.7cm

PRE-LIT CHRISTMAS TREE

Thank you for your purchase of this pre-lit Christmas tree.

With proper use and care, this tree will provide years of trouble-free enjoyment.

Please follow the instructions below in order to properly assemble and store your tree.

ASSEMBLY INSTRUCTIONS

(We recommend wearing proper clothing in order to prevent scratches that may occur during the assembly process.)

Carefully unpack the contents from the tree's carton (Fig 1).

Your tree will include the following components:

- A folding metal tree stand with (1) eyebolt.
- A On/Off push button foot pedal with cord and plug; which is pre-attached to your tree (Fig 5).
- 5 tree sections - labeled "A", "B", "C", "D" and "E", as shown in Fig 5.
- Contained in the poly-bag adhered to the interior flap of the carton is the remote control which operates your tree's 10 function lighting capability. (2 x AAA batteries are included)
- Optional - Tree top support rod.

Fig 1

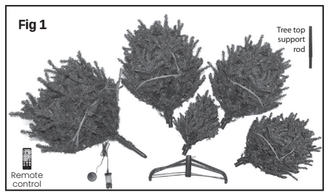

ASSEMBLY OF THE TREE STAND

1. Remove the tree stand from the plastic bag, loosen the eye bolt and open the tree stand to form an "X".
2. Align the hole for the insertion of the eyebolt.
3. Insert the eyebolt and begin threading in a clockwise direction for a couple of rotations only; leaving enough room for the tree's pole from section "A" to be inserted into the assembled stand (Fig 2).
4. Place the tree stand in its desired location; as once the tree is fully assembled, it may become too difficult to move and relocate.

Fig 2

ASSEMBLY OF THE TREE

1. Locate the bottom section of the tree which is identified by a label on the outer branches marked "A" (Fig 5).
2. Remove the protective plastic cap from the end of the pole, (that is pinched to a point), and place that end into the tree stand.
3. Now tighten the eyebolt on the tree stand; being careful not to over-tighten (Fig 3).

Fig 3

4. Remove the strapping bounding the branches upright (Fig 8). **Caution:** Do not cut.
5. Gently guide the branches of section "A" downward into place.
6. Beneath the canopy of section "A", contain's a On/Off push button foot pedal with cord and plug (Fig 5).

   Remove the twist-tie binding the cord together and insert the plug into a working electrical outlet. Section "A" will now be lit. If section "A" fails to light - press the push button foot pedal (Fig 5) - as it may be in the "Off" position.

AU26

POWER POLE TECHNOLOGY

NOTE: Your tree has been designed with Power Pole technology; allowing for each of the tree's remaining sections to light up automatically, upon a firm insertion of each lettered section (Fig 5).

7. Locate the next section of the tree which is identified by a label on the outer branches marked "B" (Fig 5).
8. Remove the protective plastic cap from the end of the pole on section "B"; insert that end onto the top of the pole of section "A" (Fig 4).

Fig 4

9. Once section "B" is fully inserted downward into section "A"; both section "A" and section "B" will now be lit.
10. Again, remove the strapping bounding the branches upright (Fig 8). **Caution:** Do not cut.
11. Gently guide the branches of section "B" downward into place.
12. Locate the next section of the tree which is identified by a label on the outer branches marked "C" (Fig 5).
13. Remove the protective plastic cap from the end of the pole on section "C" insert that end onto the top of the pole of section "B" (Fig 4).
14. Once section "C" is fully inserted downward into section "B". Section "A", "B" and "C" will be lit.
15. Again, remove the strapping bounding the branches upright (Fig 8). **Caution:** Do not cut.
16. Gently guide the branches of section "C" downward into place.
17. Locate the next section of the tree which is identified by a label on the outer branches marked "D" (Fig 5).
18. Remove the protective plastic cap from the end of the pole on section "D" insert that end onto the top of the pole of section "C" (Fig 4).
19. Once section "D" is fully inserted downward into section C". Section "A", "B", "C" and "D" will be lit.
20. Again, remove the strapping bounding the branches upright (Fig 8). **Caution:** Do not cut.
21. Gently guide the branches of section "D" downward into place.
22. Locate the top section of the tree which is identified by a label on the outer branches marked "E" (Fig 5).
23. Insert the top section "E" onto the top of section "D" (Fig 5).
24. Once Section "E" is fully inserted downward into section "D" your entire tree will now be lit.
25. Gently guide the branches of section "E" downward into place.

    Assembly is now completed. Proceed to spread & fluff the branch tips, to further enhance the tree's appearance, as needed.
26. Optional: A "Tree top support rod" has been provided to aid in the support of a lit or non-lit tree top. Note; A downward insertion of this support rod into a metal sleeve, atop section, is required (Fig 5).

Fig 5

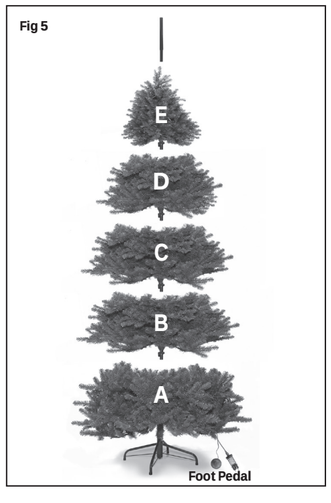

REMOTE CONTROL OPERATION

Your Pre-Lit LED Christmas Tree's Multiple lighting function capability is controlled by the use of the remote control provided (Fig 6), or by phone or tablet - by downloading the APP!

Fig 6

SELECTING COLOR & FUNCTION

Simply press a desired lighting function button - Per the listed functions below.

1. R-Red
2. G-Green
3. B-Blue
4. P-Pink
5. PU-Purple
6. W-White
7. 1- Mother' Day
8. 2- Father' Day
9. 3- Independence Day
10. 4- Halloween
11. 5- Christmas
12. 6- New Year's Eve
13. 7- Rainbow
14. 8- Multi Color
15. Bug - Bug Light
16. 6H - Turn on for 6 hours, turn off 18 hours
17. 🔉- VOL-- 18. 🔊- VOL+
19. LightShow+1 - LightShow 1
20. LightShow+2 - LightShow 2
21. LightShow+3 - LightShow 3
22. LightShow+4 - LightShow 4
23. LightShow+5 - MusicShow 1 Happy Birthday
24. LightShow+6 - MusicShow 2 Helloween Horror
25. LightShow+7 - MusicShow 3 We Wish You A Merry Christmas
26. LightShow+8 - MusicShow 4 Wienerwald
27. WW - Warm White 28. ⏻ - Power

6H TIMER FEATURE:

- Press the "6H" button; the light set will flash **BLUE** 3 times – Indicating that the 6 hour "On" / 18 hour "Off" timer has now been activated.
- **Note:** The light set will automatically resume back to the "On" position - 24 hours from when it was initially activated.
- Press the "6H" button again, the light set will flash **RED** 3 times – Indicating that the timer feature has now been deactivated.
- **Note:** The light set On/Off operation is now controlled by either the manual operation of the remote control, APP, plug or by the control box.

ON/OFF PUSH BUTTON FOOT PEDAL OPERATION

The On/Off push button foot pedal is intended to provide basic manual on/off operation; and therefore cannot provide the remote control's or App's Multiple function lighting capability.

NOTE: The foot pedal (Fig 7) will cycle through the following functions.

Red, Green, Blue, Pink, Purple, Pure White, Warm White, Multi color, Bug Light, Turn off

Fig 7

Fig 8

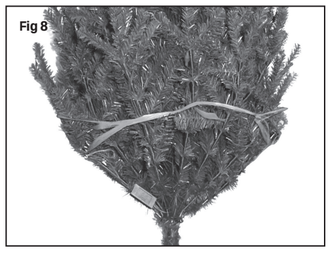

TROUBLESHOOTING

1. If the tree does not illuminate press the on/off button ⏻ on your remote control. If failure to light persists, the battery may need to be replaced. Insert 2 x AAA batteries.

   NOTE: The tree's Multiple function lighting capability is controlled by the use of the remote control provided, by phone or tablet - by downloading the APP.

   NOTE: By reducing the distance from your tree; you may achieve better remote control and App reception.

   If the tree fails to light due to a damaged or defective remote control; please resort to foot pedal or APP operation until a new remote control can be provided through our customer service center.
2. If failure to light persists, press the push button foot pedal; as it may be in the "Off" mode.
3. If the top of the tree or another individual lettered section does not illuminate, remove each section and then reinsert as instructed, to ensure the electrical connection is made.
4. If a light set, section or area fails to light. Simply check the coaxial connections - near the power pole area (Fig 9).
5. Always ensure that the electric outlet to be used; is functioning & working as it is intended.

   NOTE: A SPECIALTY NON-REPLACEABLE LED HAS BEEN APPLIED TO YOUR PRE-LIT TREE; IN THE CASE THAT A INDIVIDUAL LED BULB BURNS OUT, THE REMAINING LED BULBS WILL CONTINUE TO SHINE.

Fig 9

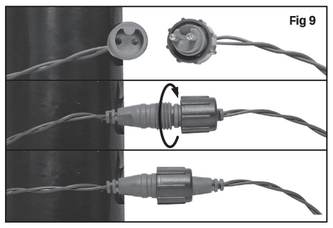

DISASSEMBLY & STORAGE

1. Gently remove the plug from its electrical outlet, and carefully bind the cord which contains the on/off push button foot pedal and plug.
2. Beginning with the tree's top section; lift each section straight up from the section below, and continue working downward.

   NOTE: You may have to slightly wiggle each section as you lift each section upward.
3. To remove the bottom and final section; loosen the eyebolt by turning in a counter-clockwise direction and lift section "A" from the support collar of the tree stand.
4. Gently fold the branches of each section upward, towards the center, and position in the storage container.

   NOTE: With the exception of the tree's "top" section; by holding each section upside down; the branches will collapse downward, due to the hinging, aiding in the packing of each section into the storage container.
5. Unthread the eyebolt from the tree's stand and fold together; placing in the storage container.
6. Replace the plastic protective caps on the pole's ends before placing in carton.
7. It is recommended to always store the tree in a cool, dry location protected from excessive exposure to heat or sunlight.

   NOTE: Store your remote control in a SAFE & DRY location and remove the batteries from remote control before storage.

   NOTE: ALTHOUGH THE LED LIGHT STRINGS ON THE TREE ARE RATED FOR INDOOR OR OUTDOOR USE; THE COMBINATION OF THE TREE WITH THE LED LIGHTS IS FOR INDOOR USE ONLY.

Auriotek

Scan the below code to download APP

Scan the below QR code to read the APP instruction manual.

Made in China
Printed in China
This is not a toy, for decorative use only.

34cm

29.7cm

FOROPLYST JULETRÆ

Tak for dit køb af dette foroplyste juletræ.

Med korrekt brug og pleje vil dette træ give mange års problemfri glæde.

Følg venligst instruktionerne nedenfor for at samle og opbevare dit træ korrekt.

SAMLEVEJLEDNING

(Vi anbefaler at bære passende tøj for at forhindre ridser, der kan opstå under monteringsprocessen.)

Pak forsigtigt indholdet ud af træets kasse (Fig. 1).

Dit træ vil indeholde følgende komponenter:

- En sammenklappelig metaltræstativ med (1) øjebolt.
- En tænd/sluk-fodpedal med ledning og stik; som er forudmonteret på dit træ (Fig. 5).
- 5 træsektioner - mærket "A", "B", "C", "D" og "E", som vist i Fig. 5.
- I polyposen, der er fastgjort til kassens indvendige flap, er der fjernbetjeningen, der betjener dit træs 10-funktionslysfunktion. (2 x AAA-batterier medfølger)
- Valgfrit - Støttestang til træstoppen.

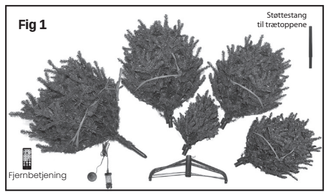

SAMLING AF TRÆSTANDEN

1. Tag træstativet ud af plastikposen, løsn øjebolten, og åbn træstativet, så det danner et "X".
2. Juster hullet til indsættelse af øjebolten.
3. Sæt øjebolten i, og begynd at skrue den med uret i et par omdrejninger. Der skal være plads nok til, at træets stang fra sektion "A" kan indsættes i det samlede stativ (Fig. 2).
4. Placer træstativet på det ønskede sted. Når træet er fuldt samlet, kan det blive for svært at flytte det.

TRÆETS SAMLING

1. Find den nederste del af træet, som er identificeret med en etiket på de yderste grene markeret med "A" (Fig. 5).
2. Fjern den beskyttende plastikhætte fra enden af stangen (som er klemt fast til en spids), og placer den ende i træstativet.
3. Spænd nu øjebolten på træstativet; pas på ikke at overspænde (Fig. 3).

4. Fjern remmen, der holder grenene oprejst (Fig. 8). **Forsigtig:** Skær ikke.
5. Før forsigtigt grenene på sektion "A" nedad på plads.
6. Under baldakinen på sektion "A" findes en tænd/sluk-fodpedal med ledning og stik (Fig. 5).

   Fjern snoren, der binder ledningen sammen, og sæt stikket i en fungerende stikkontakt. Sektion "A" lyser nu. Hvis sektion "A" ikke lyser, skal du trykke på fodpedalen (Fig. 5) – da den muligvis er i "slukket"-position.

AU26

POWER POLE-TEKNOLOGI

BEMÆRK: Dit træ er designet med Power Pole-teknologi, der gør det muligt at lyse op automatisk, når hver bogstavsektion sættes fast (Fig. 5).

7. Find den øverste del af træet, som er identificeret med en etiket på de ydre grene markeret med "B" (Fig. 5).
8. Fjern den beskyttende plastikhætte fra enden af stangen på sektion "B"; sæt den ende fast på toppen af stangen på sektion "A" (Fig. 4).

9. Når sektion "B" er sat helt nedad i sektion "A", vil både sektion "A" og sektion "B" nu lyse.
10. Fjern igen remmen, der omslutter de oprejste grene (Fig. 8). **Forsigtig:** Skær ikke.
11. Før forsigtigt grenene fra sektion "B" nedad på plads.
12. Find den næste sektion af træet, som er identificeret med en etiket på de ydre grene markeret "C" (Fig. 5).
13. Fjern den beskyttende plastikhætte fra enden af stangen på sektion "C", og sæt den ende oven på stangen på sektion "B" (Fig. 4).
14. Når sektion "C" er sat helt nedad i sektion "B", vil sektion "A", "B" og "C" lyse.
15. Fjern igen remmen, der omslutter de oprejste grene (Fig. 8). **Forsigtig:** Skær ikke.
16. Før forsigtigt grenene fra sektion "C" nedad på plads.
17. Find den næste del af træet, som er identificeret med en etiket på de ydre grene markeret med "D" (Fig. 5).
18. Fjern den beskyttende plastikhætte fra enden af stangen på sektion "D", og sæt den ende oven på stangen på sektion "C" (Fig. 4).
19. Når sektion "D" er sat helt nedad i sektion C", vil sektion "A", "B", "C" og "D" lyse.
20. Fjern igen remmen, der omslutter grenene oprejst (Fig. 8). **Forsigtig:** Skær ikke.
21. Før forsigtigt grenene fra sektion "D" nedad på plads.
22. Find den øverste sektion af træet, som er identificeret med en etiket på de ydre grene markeret med "E" (Fig. 5).
23. Sæt den øverste sektion "E" oven på sektion "D" (Fig. 5).
24. Når sektion "E" er sat helt nedad i sektion "D", vil hele dit træ nu være oplyst.
25. Før forsigtigt grenene fra sektion "E" nedad på plads.

    Samlingen er nu færdig. Fortsæt med at sprede og løfte grenspidserne for yderligere at forbedre træets udseende efter behov.
26. Valgfrit: En "støttestang til træstoppen" er medfølgende for at hjælpe med at støtte en oplyst eller ikke-oplyst træstop. Bemærk: En nedadgående indsættelse af denne støttestang i en metalmuffe, øverst, er påkrævet (Fig. 5).

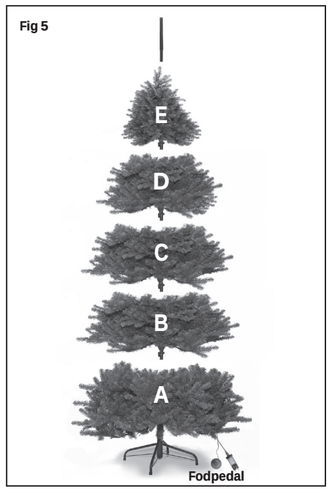

FJERNBETJENING

Dit præoplyste LED-juletræs flere belysningsfunktioner styres ved hjælp af den medfølgende fjernbetjening (Fig. 6) eller via telefon eller tablet - ved at downloade appen!

Fig 6

VALG AF FARVE OG FUNKTION

Tryk blot på en ønsket lysfunktionsknap - i henhold til de nedenfor anførte funktioner.

1. R-Rød
2. G-Grøn
3. B-Blå
4. P-Lyserød
5. PU-Lilla
6. W-Hvid
7. 1- Mors Dag
8. 2- Fars Dag
9. 3- Uafhængighedsdag
10. 4- Halloween
11. 5- Jul
12. 6- Nytårsaften
13. 7- Regnbue
14. 8- Flerfarvet
15. Bug - Insektlys
16. 6H - Tænd i 6 timer, sluk i 18 timer
17. 🔉- - Lavere Lydstyrke
18. 🔊+ - Højere Lydstyrke
19. LightShow+1 - Lysshow 1
20. LightShow+2 - Lysshow 2
21. LightShow+3 - Lysshow 3
22. LightShow+4 - Lysshow 4
23. LightShow+5 - Musikshow 1 Tillykke Med Fødselsdagen
24. LightShow+6 - Musikshow 2 Helloween-gyser
25. LightShow+7 - Musikshow 3 Vi Ønsker Dig En Glædelig Jul
26. LightShow+8 - Musikshow 4 Wienerwald
27. WW - Varm Hvid
28. ⏻ - Magt

6H TIMERFUNKTION:

- Tryk på knappen "6H". Lyset blinker **BLÅ** 3 gange – Dette indikerer, at timeren for 6 timer "Tændt" / 18 timer "Sluk" nu er aktiveret.
- **Bemærk:** Lyset vil automatisk vende tilbage til "Tændt"-positionen – 24 timer efter, at det oprindeligt blev aktiveret.
- Tryk på knappen "6H" igen, lyset vil blinke **RØDT** 3 gange – hvilket indikerer, at timerfunktionen nu er deaktiveret.
- **Bemærk:** Lysets tænd/sluk-funktion styres nu enten manuelt via fjernbetjeningen, appen, stikket eller via kontrolboksen.

TIL/FRA-KNAP FODPEDALBETJENING

Fodpedalen til tænd/sluk-knappen er beregnet til grundlæggende manuel tænd/sluk-betjening og kan derfor ikke fungere som fjernbetjeningens eller appens multifunktionsbelysning.

BEMÆRK: Fodpedalen (Fig. 7) vil gennemgå følgende funktioner.

Rød, Grøn, Blå, Pink, Lilla, Ren hvid, Varm hvid, Flerfarvet, Insektlampe, Sluk

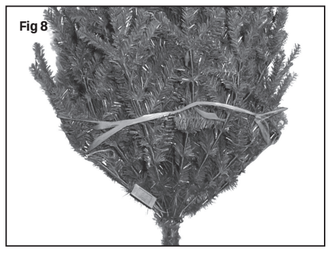

FEJLFINDING

1. Hvis træet ikke lyser, skal du trykke på tænd/sluk-knappen ⏻ på din fjernbetjening. Hvis det ikke lyser, skal batteriet muligvis udskiftes. Isæt 2 x AAA-batterier.

   BEMÆRK: Træets multifunktionelle belysningsfunktion styres ved hjælp af den medfølgende fjernbetjening, via telefon eller tablet - ved at downloade appen.

   BEMÆRK: Ved at reducere afstanden til dit træ kan du opnå bedre fjernbetjening og app-modtagelse.

   Hvis træet ikke lyser på grund af en beskadiget eller defekt fjernbetjening, skal du bruge fodpedalen eller appen, indtil en ny fjernbetjening kan leveres via vores kundeservicecenter.
2. Hvis det ikke lyser, skal du trykke på fodpedalen; den kan være i "Slukket"-tilstand.
3. Hvis toppen af træet eller en anden individuel sektion med bogstaver ikke lyser, skal du fjerne hver sektion og derefter sætte den i igen som anvist for at sikre, at den elektriske forbindelse er oprettet.
4. Hvis en lyskilde, sektion eller et område ikke lyser, skal du blot kontrollere de koaksiale forbindelser - i nærheden af elmastområdet (Fig. 9).
5. **Sørg altid for, at den stikkontakt, der skal bruges, fungerer som den skal. BEMÆRK: DER ER monteret en special, ikke-udskiftelig LED-pære på dit forbelyste træ. Hvis en enkelt LED-pære brænder ud, vil de resterende LED-pærer fortsætte med at lyse.**

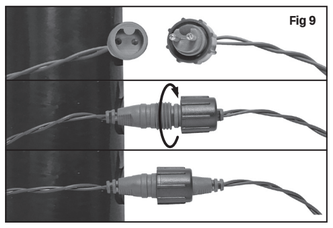

DEMONTERING OG OPBEVARING

1. Tag forsigtigt stikket ud af stikkontakten, og bind forsigtigt ledningen, der indeholder tænd/sluk-fodpedalen og stikket.
2. Start med træets øverste del; løft hver sektion lige op fra sektionen nedenunder, og fortsæt med at arbejde nedad.

   BEMÆRK: Du skal muligvis vrikke hver sektion let, når du løfter hver sektion opad.
3. For at fjerne den nederste og sidste sektion; løsn øjebolten ved at dreje den mod uret og løft sektion "A" fra støttekraven på træstativet.
4. Fold forsigtigt grenene på hver sektion opad, mod midten, og placer dem i opbevaringsbeholderen.

   BEMÆRK: Med undtagelse af træets "øverste" sektion; ved at holde hver sektion på hovedet; vil grenene falde nedad på grund af hængslet, hvilket hjælper med at pakke hver sektion i opbevaringsbeholderen.
5. Skru øjebolten af træets stativ og fold den sammen; placer den i opbevaringsbeholderen.
6. Sæt plastikbeskyttelseshætterne på stangens ender, før du placerer den i kartonen.
7. Det anbefales altid at opbevare træet et køligt og tørt sted, beskyttet mod overdreven varme eller sollys.

   BEMÆRK: Opbevar din fjernbetjening et SIKKERT OG TØRT sted, og fjern batterierne fra fjernbetjeningen før opbevaring.

   BEMÆRK: SELVOM LED-LYSSTRINGENE PÅ TRÆET ER BEREGNET TIL INDENDØRS ELLER UDENDØRS BRUG, ER KOMBINATIONEN AF TRÆET MED LED-LYS KUN TIL INDENDØRS BRUG.

Auriotek

Scan nedenstående kode for at downloade APP'en

Scan QR-koden nedenfor for at læse appen's instruktionsmanual.

Fremstillet i Kina
Trykt i Kina
Dette er ikke et legetøj – kun til dekorativ brug.